Congratulations on the purchase of your new Men's Foil Shaver. For maximum satisfaction when using this quality product, please take a minute to read the following operating and care instructions. Thank you for choosing Conair, the #1 brand in personal care appliances.

# SAVE THESE INSTRUCTIONS

## WARNING

1. Men whose skin is sensitive or easily irritated by shaving, or who suffer from a skin allergy, should test one section on the leg or arm before using the shaver.
2. **The foils are thin and precisely finished pieces. Do not press hard against the foils or drop foils. A warped or distorted foil will produce poor shaving results. Also a damaged foil may cause skin injury. A damaged foil should be replaced immediately.**

# OPERATING INSTRUCTIONS

## IMPORTANT

This shaver has been engineered to give you a clean, close, smooth shave. It requires 2 AAA batteries (not included). We recommend using longer-lasting alkaline batteries in your shaver. If you are not going to use your shaver for a long period of time or if the batteries are dead, remove or replace the batteries from the unit.
At first, your shave might not be as close as you expect. However, this is normal. It takes time for your skin and hair to adjust to the new procedure and for you to learn how to effectively use the shaver. Caution: Most blade users will push too hard and therefore not get a satisfactory shave. You must press gently so the hair can get into the holes of the foil; pressing too hard makes the hair flat. Please be patient; use your shaver 10 to 12 times before you judge its performance.

# FOR HOUSEHOLD USE ONLY

## OPERATING INSTRUCTIONS

1. Remove the battery compartment cover by pushing in and down toward the bottom of the shaver.
2. Align the two AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into place.
3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use your shaver, remove the transparent cover and push ON/OFF switch upwards to the ON position.
5. After you finish using your shaver, push down on the ON/OFF switch to turn the shaver off.
6. Ensure the batteries are installed correctly with regard to polarity (+ and -).
7. Remove the batteries if the batteries are no longer functional or if the shaver is left unused for an extended period of time.
8. Clean the battery contacts and also those of the device prior to battery installation.
9. Remove used batteries promptly.
10. Always purchase the correct size and grade of battery most suitable for the intended use.
11. Replace all batteries of a set at the same time.
12. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.

## CAUTION

Do not immerse any part of the unit in water or other liquids.
The outer foils and cutters are delicate and must be handled very carefully.

## BEFORE SHAVING

1. Be certain that your skin is clean. If you have sensitive skin, you may want to apply talcum powder before and after you shave.
2. Clean your shaver after each use. This will ensure the best performance. (Please refer to "How to Clean Your Shaver" section for further instructions.)
3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.
4. After wet cleaning, allow the foil frame and cutters to air-dry before closing foil frame and shaver head. Replace shaver head back onto the shaver until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the shaving head air-dry.
5. If the body of the shaver becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.
6. Once dried, carefully replace the protective cap.

## HOW TO CLEAN YOUR SHAVER

1. Make sure unit is in the OFF position before cleaning your shaver.
2. Hold shaver head and lift up from both sides, revealing the cutter. (FIG. 1)
Be careful not to push on the foils. They are delicate and can easily be damaged.

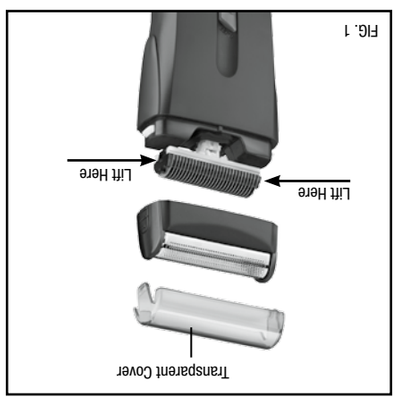

FIG. 1

## CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

Le felicitamos por haber comprado esta máquina de afeitar. Para lograr resultados óptimos, siempre lea las instrucciones de uso y mantenimiento que se encuentran a continuación. Gracias por elegir Conair, el no. 1 en aparatos de cuidado personal.

# GUARDE ESTAS INSTRUCCIONES

## ADVERTENCIA

1. Si su piel es sensible o se irrita fácilmente cuando se afeita, o si padece de alergia, pruebe el aparato sobre una pequeña sección del brazo o de la pierna antes de usarlo.
2. **Las hojas de afeitar son delgadas y precisas. No las apriete mucho sobre la piel ni las deje caer. Una hoja lastimada o deformada impedirá el buen funcionamiento del aparato y puede provocar heridas. Reemplace las hojas defectuosas inmediatamente.**

# INSTRUCCIONES DE OPERACIÓN

## IMPORTANTE

Este aparato ha sido diseñado para proporcionar un afeitado al ras suave y preciso. Requiere 2 pilas AAA (no incluidas). Le aconsejamos que utilice pilas alcalinas, las cuales son más duraderas. Retire la(s) pila(s) al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo.

Puede que sus primeros intentos no sean perfectos. Esto es normal. Su piel y sus vellos necesitan tiempo para acostumbrarse a esta nueva técnica de afeitado. Precaución: Presionar las hojas mucho contra la piel no producirá resultados satisfactorios. Se debe pasar la máquina suavemente sobre la piel; presionar mucho aplasta los vellos e impide el afeitado. Sea paciente; utilice el aparato 10–12 veces antes de juzgar su rendimiento.

# PARA USO DOMÉSTICO SOLAMENTE

## INSTRUCCIONES DE OPERACIÓN

1. Deslice la cubierta del compartimiento de la(s) pila(s) hacia abajo para abrirlo.
2. Instale dos pilas AAA, respetando los signos de polaridad. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre la cubierta del compartimiento de la(s) pila(s), empujando hasta que haga clic.
4. Para usar el aparato, retire la tapa y deslice el interruptor hacia arriba (ON).
5. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
6. Siempre respete los signos de polaridad (+/-) al instalar la(s) pila(s).
7. Retire las pilas al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo.
8. Limpie los contactos del aparato y los de la(s) pila(s) antes de instalarlas.
9. Retire las pilas usadas sin demora.
10. No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
11. Cambie todas las pilas al mismo tiempo.
12. No junte pilas nuevas con pilas usadas. No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas recargables (NiCd o NiMH).

## PRECAUCIÓN:

No sumerja el aparato en agua u otro líquido. Las hojas de afeitar y las cuchillas internas son delicadas y deben manipularse con mucho cuidado.

## PREPARACIÓN

1. Asegúrese de que la piel esté limpia. Si su piel es sensible, puede aplicar talco antes y después del afeitado si desea.
2. Limpie el aparato después de cada uso. Esto asegurará un rendimiento óptimo. Para más información, véase la sección "Instrucciones de limpieza".

## INSTRUCCIONES DE LIMPIEZA

1. Asegúrese de que el aparato esté apagado (OFF).
2. Sosteniendo firmemente el cabezal, alce el cabezal. (FIG. 1)
Tenga cuidado de no presionar las hojas. Son delicadas y pueden dañarse fácilmente.

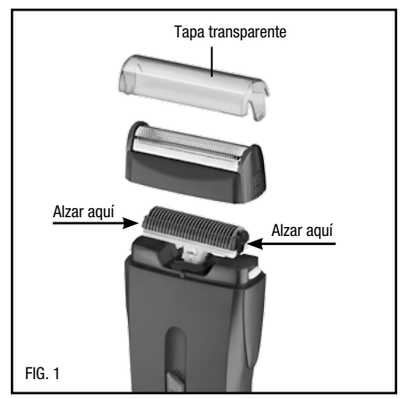

FIG. 1

3. Enjuague las cuchillas internas y las hojas bajo agua corriente. No utilice agua caliente. Utilice agua fría o tibia solamente.
4. Permita que las cuchillas y las hojas sequen al aire antes de volver a ensamblar el cabezal. Una vez seco, vuelva a instalar el cabezal, presionando hasta que encaje en su lugar. Limpie el cuerpo del aparato con una toalla seca. No seque las hojas. Permita que sequen al aire.
5. Si el cuerpo del aparato está sucio, límpielo con un paño ligeramente humedecido con agua jabonosa, o detergente suave. Nunca utilice disolvente, solventes o limpiadores fuertes.
6. Regrese el protector de hojas sobre el cabezal.

## PRECAUCIÓN:

1. Si tiene que sacudir el aparato para eliminar el exceso de agua, sosténgalo firmemente para no dejarlo caer o desarmar el cabezal.
2. No utilice un secador o un calentador para secar el aparato. Esto podría dañarlo o impedir su buen funcionamiento.

## REPLACING THE FOIL FRAME & CUTTER

Replace the foil frame when you find you have to push harder on the shaver to get a close shave, or if you have to go over an area more often to get a smooth result. It is also time to replace the foils if you experience skin irritation. Replacement time will depend on how often you use your shaver and how quickly your hair grows.
Caution: Never replace the cutters without replacing the foil as well.

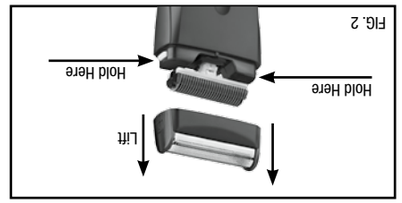

FIG. 2

1. Remove the foil frame. (FIG. 2)

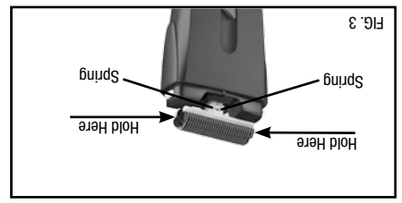

FIG. 3

2. Push one side of the cutter to unlock it and take it out. (FIG. 3) Be careful not to lose the small spring, as it will be needed with the new cutter.

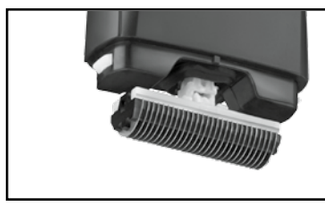
FIG. 4

3. Hold the new cutter firmly on the sides and guide it gently into the inner cutter mount until it locks into place. (FIG. 4)

FIG. 5

4. Press firmly until the cutter snaps into place.
5. Replace the foil frame. (FIG. 5)

## LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.
**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**Please register this product at www.conair.com/registration**

©2013 Conair Corporation

**Service Center**

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

13PG001039

IB-12432

FOIL SHAVER
BATTERY OPERATED

Instruction Booklet

CONAIR FOR MEN®

Model SHV1

## CÓMO REEMPLAZAR LAS HOJAS Y LAS CUCHILLAS INTERNAS

Si siente que debe hacer fuerza para afeitarse o si debe pasar la máquina sobre la misma zona varias veces para conseguir un resultado suave, cambie las cuchillas internas. Cambie las hojas si irritan la piel. La vida útil de las cuchillas/hojas dependerá de la frecuencia de uso del aparato.
Precaución: Siempre reemplace las cuchillas y las hojas al mismo tiempo.

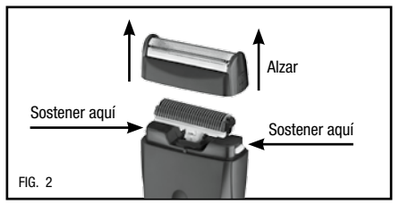

FIG. 2

1. Retire el cabezal (FIG. 2)

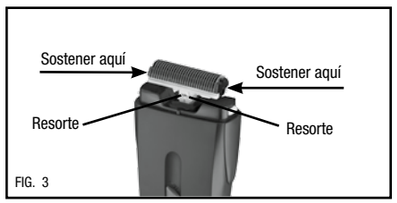

FIG. 3

2. Presione el costado de las cuchillas para liberarlas y retírelas (FIG. 3) Tenga cuidado de no perder el resorte; lo necesitará para instalar las nuevas cuchillas.

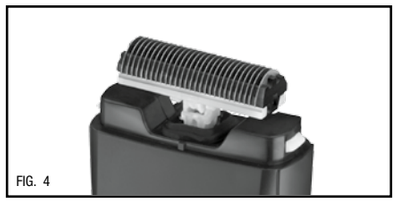
FIG. 4

3. Sostenga las cuchillas por los costados e insértelas sobre el cabezal, un lado tras otro. (FIG. 4)

FIG. 5

4. Presione firmemente hasta que encaje.
5. Vuelva a instalar el cabezal. (FIG. 5)

## GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.
Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.
**CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA.** Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.
**CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.**
Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

**Para registrar su producto, visítenos en: www.conair.com/registration**

©2013 Conair Corporation

**Centro de servicio**

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

13PG001039

IB-12432

MÁQUINA DE AFEITAR
ALIMENTADA POR PILAS

Manual de instrucciones

CONAIR FOR MEN®

Modelo SHV1